



# Canon PowerShot SX120 IS Back Cover Replacement

Use this repair guide to disassemble the Camera Case of a Canon PowerShot SX120 IS.

Written By: Maria



## INTRODUCTION

Disassemble the back cover in order to open the camera and access the inside components.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover



- ❗ Remove the double AA batteries before starting to disassemble. This will prevent you from permanently damaging your camera.
- Turn the camera to the side that has the screen. Unscrew the two black 3.4 mm screws with a #00 Phillips screwdriver.
- Unscrew the two black 3.4 mm screws with a #00 Phillips screwdriver.

## Step 2



- Put the camera with the lens facing up, turn it to the side where the DC IN A/V OUT DIGITAL Cover and lanyard attachment are located.
- Unscrew the black 3.4 mm screws with a #00 Phillips screwdriver.



## Step 3



- Put the camera with the lens facing up, turn it to the side where the Cover battery is located.
- Unscrew the black 3.4 mm screws with a #00 Phillips screwdriver.

## Step 4



- Put the camera with the lens facing up, turn it to the side where the compartment of the battery (CR1220) for time/date is located.
- Unscrew the black 3.4 mm screws with a #00 Phillips screwdriver.

## Step 5



- Put the camera with the lens facing down, turn it to the side where the DC IN A/V OUT DIGITAL Cover and the silver lanyard attachment are located.
- Open the DC IN A/V OUT DIGITAL cover.
- Unscrew the black 3.4 mm screws with a #00 Phillips screwdriver.

## Step 6



- Turn the camera with the lens facing down.
- ⓘ Opening the camera can be challenging. Don't get discouraged if it takes you a few tries before the camera is opened.
- Use the blue opening tool to make lever. Insert the opening tool in the seam where the front case and the back case assemble.
- ⚠ Carefully make pressure downwards on the opening tool so the cover can gradually open.
- Keep making pressure and slowly slide the opening tool through all the gap.
- There is one point when the cover will disassemble completely.
- ⓘ When you are disassembling the back cover, the DC IN A/V OUT DIGITAL cover will also disassemble and fall off.

## Step 7



- This is a final picture of how it's going to look when you disassemble the back cover.
- You will have 3 parts:
  - 1. The camera
  - 2. The DC IN A/V OUT DIGITAL Cover
  - 3. The back cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 05:42:54 AM.